

EN

# Instruction Manual

Thank you for purchasing this product. Before use, please read the instruction manual carefully. After reading, please keep the manual for reference.




## Caution


**Parents / Guardians:  
Please read the following  
information carefully.**

- This is not a toy. Keep this product and packaging materials away from young children and pets. Packaging items may be swallowed. The cable can coil around the neck.
- Keep this product away from small children or infants. Seek medical attention immediately if any small parts are swallowed.
- Keep the product away from dusty or humid areas.
- Do not use this product if it has been damaged or modified.
- Do not get this product wet. This may cause an electric shock or malfunction.
- Do not place this product near heat sources or leave under direct sunlight for an extended period. Overheating may cause malfunction.
- Do not use this product with a USB hub. The product may not function properly.
- Do not touch the metal parts of the USB plug.
- Do not pull the cable to unplug the product from the console. Doing so may cause the cable to break or become damaged.
- Be careful not to get your foot caught on the cable. Doing so may cause bodily injury or damage to the cable.
- Do not bend the cables roughly or use the cables while they are bundled.
- Do not apply strong impact or weight on the product.
- Do not disassemble, modify or attempt to repair this product.
- If product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzene or thinner.
- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.
- Use of this product may result in a shorter battery life than usual for the Nintendo Switch™ 2 console.
- Please only use the included USB-C™ cable to connect to the Base's lower USB-C™ Port.
- Please do not connect anything other than the Camera Unit's USB-C™ Connector to the Base's upper USB-C™ Port.


# Contents

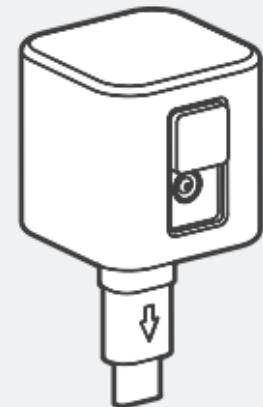


Camera Unit × 1

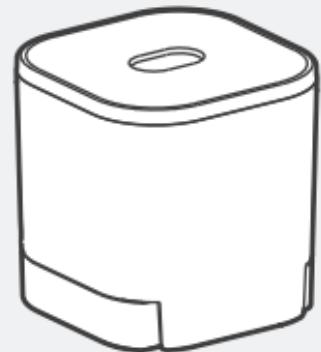

Base × 1

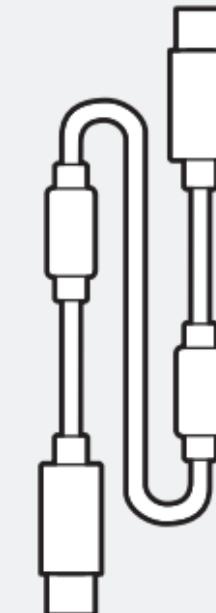

USB cable  
(USB-C™ to USB-C™)  
× 1


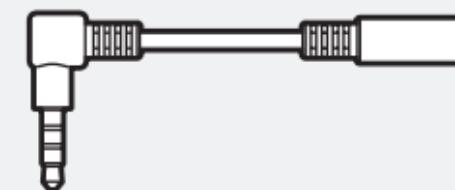


3.5mm Stereo Right  
Angle Adapter  
× 1



Instruction  
Manual  
× 1

# Layout

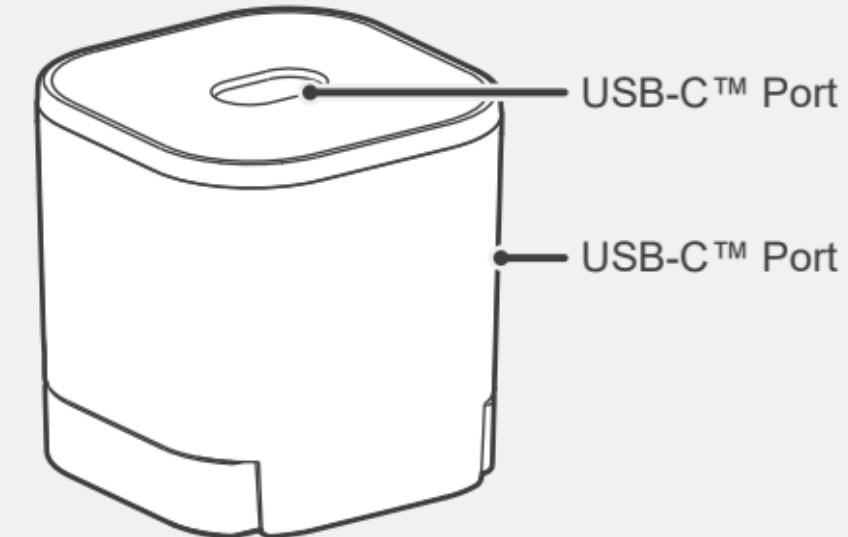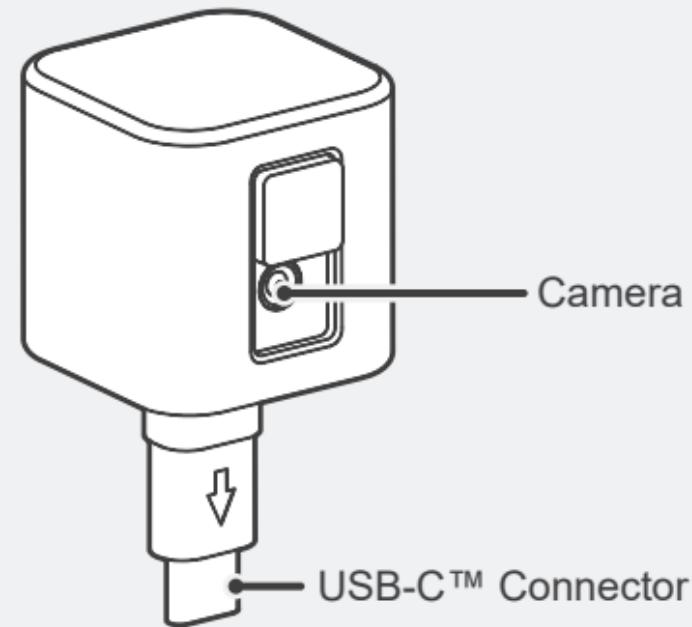


## Check before use




Uneven



Too thick

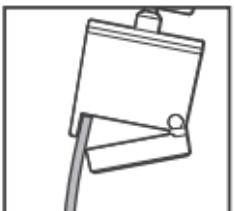


Thin or soft

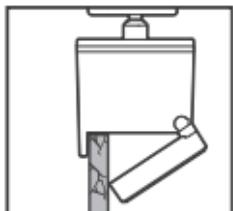


Fragile (i.e., glass)

When using this product in TV Mode, please do not mount it to the TV in an unstable way such as shown above. Doing so may cause the product to fall.

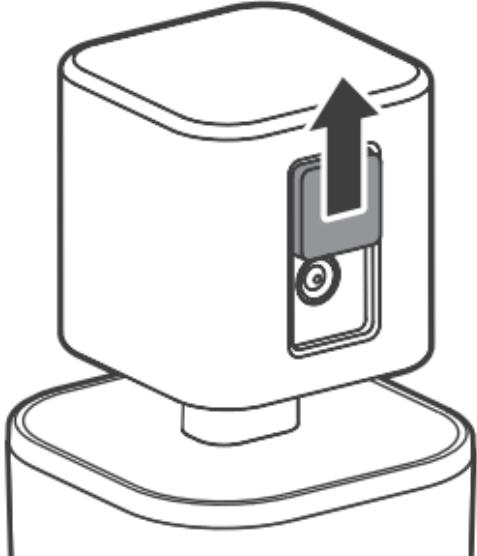


Please open the lens cover before use.

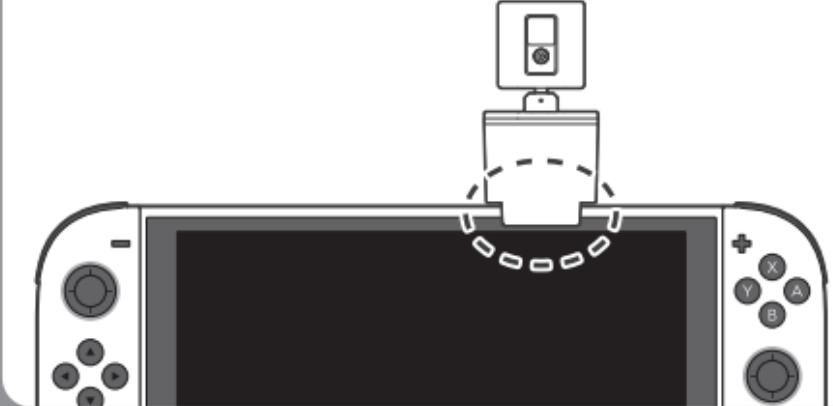


The Base cannot be mounted directly to the  
Nintendo Switch™ 2 console.


# Setup

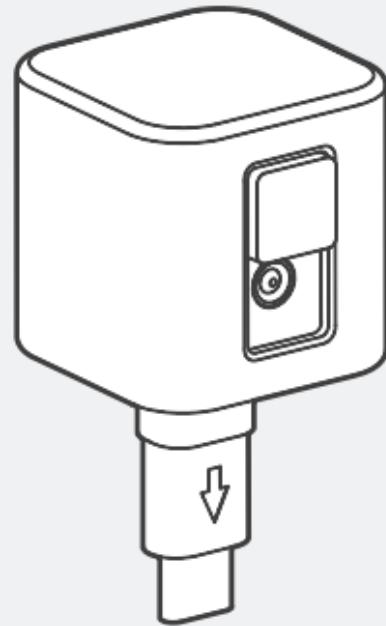

## When using the Camera Unit by itself


Please use the included 3.5mm Right-Angle adapter if the headphone plug touches the camera unit.

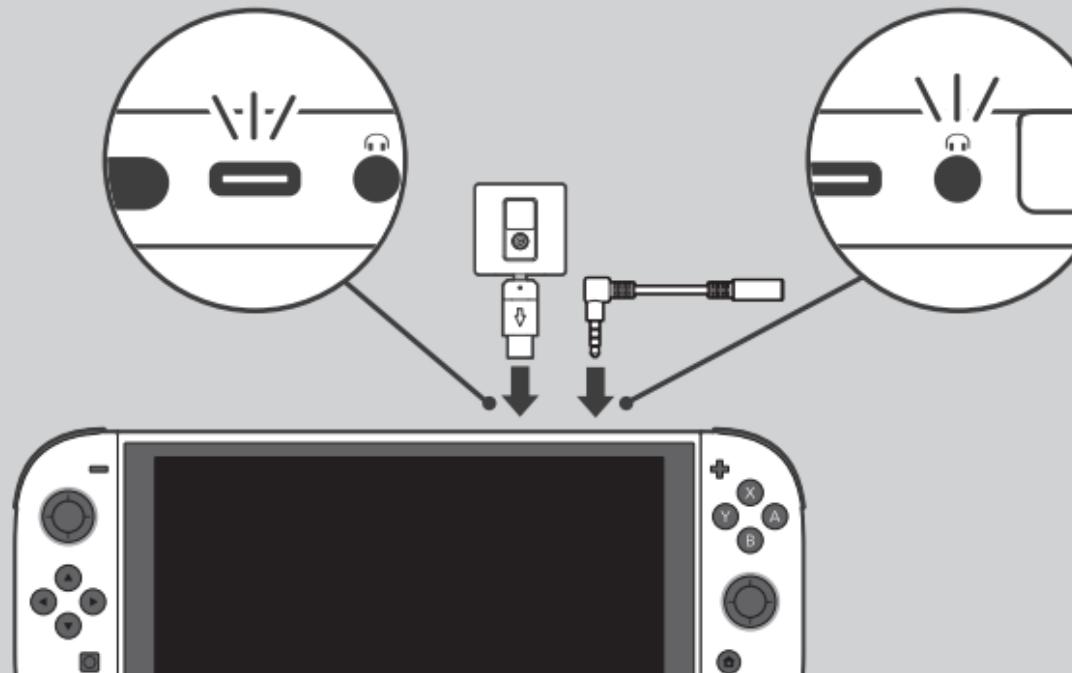

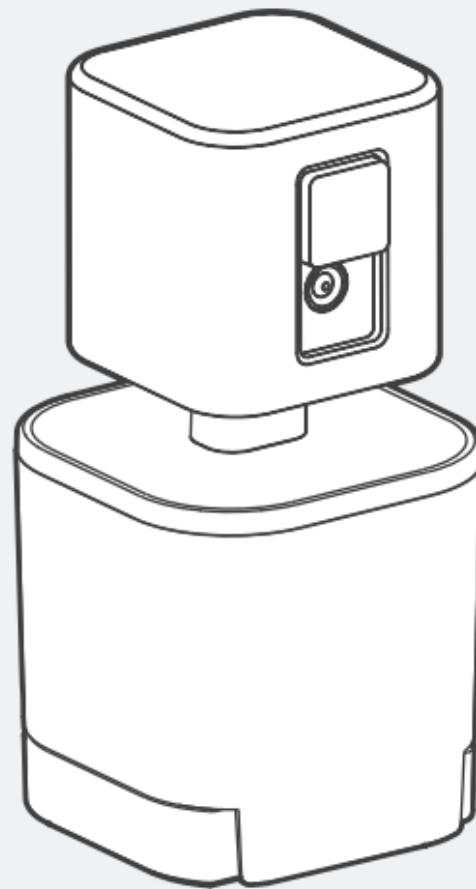


## When using the Camera Unit with the Base

**A**

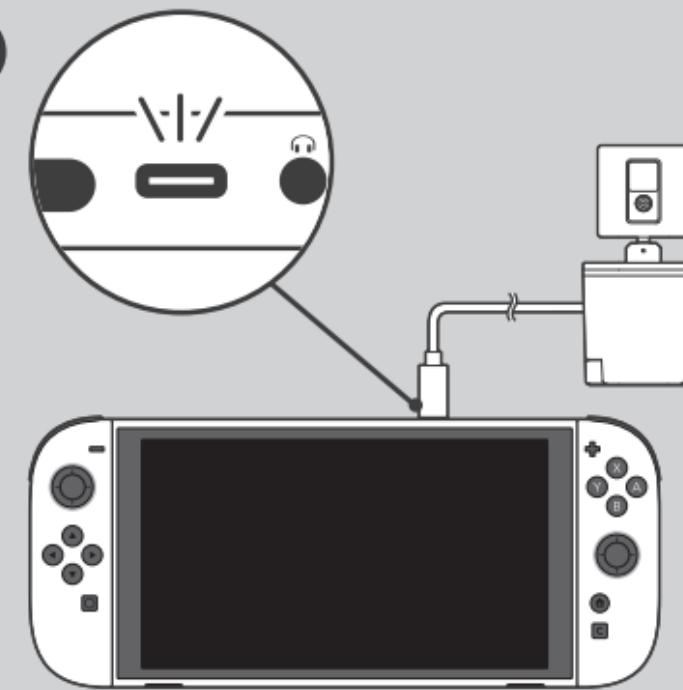

**B**

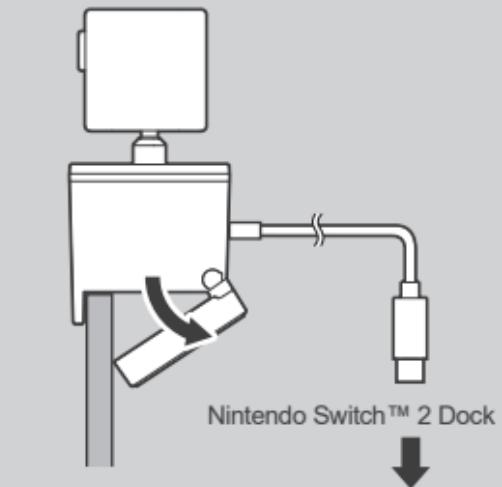

# Specifications

## Camera Unit

External Dimensions	: W 1.2 × D 1.2 × H 1.96 in / W 3 × D 3 × H 5 cm
Weight	: 1.05 oz / 30 g
Connection Type	: USB-C™
Camera resolution	: 640 × 480
Frame Rate	: 30fps
View Angle	: 85°

## Base

External Dimensions	: W 1.57 × D 1.57 × H 1.6 in / W 4 × D 4 × H 4.1 cm
Weight	: 1.8 oz / 80 g
Connection Type	: USB-C™

## USB cable (USB-C™ to USB-C™)

Cable Length	: 4 ft / 1.5 m
--------------	----------------

## 3.5mm Stereo Right Angle Adapter

Cable Length	: 3.14 in / 8 cm
--------------	------------------

**CAUTION:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**THE FCC WANTS YOU TO KNOW**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAN ICES-003(B) / NMB-003(B)**

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

**Simplified Declaration of Conformity**

Hereby, HORI declares that this product is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://hori.co.uk/consumer-information/>

**For UK:**

Hereby, HORI declares that this product is in compliance with the relevant statutory requirements.

The full text of the declaration of conformity is available at the following internet address:

<https://hori.co.uk/consumer-information/>

**PRODUCT DISPOSAL INFORMATION**

Where you see this symbol on any of our electrical products or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.



HORI warrants to the original purchaser that our product purchased new in its original packaging shall be free of any defects in both material and workmanship for a period of one year from the original date of purchase. If the warranty claim cannot be processed through the original retailer, please contact HORI customer support.

For customer support in North America and Latin America, please use our customer support form:

<https://stores.horiusa.com/support/>



For customer support in Europe, please email [info@horiuk.com](mailto:info@horiuk.com)

**Warranty Information:**

For North America, LATAM, Australia : <https://stores.horiusa.com/policies/>



For Europe & Middle East : <https://hori.co.uk/policies/>

To contact AIC, the official representative of HORI in KSA, please contact us via email or phone.

Email: [info@aic.com.sa](mailto:info@aic.com.sa)

Phone number: 8001010029

For more details, you may visit HORI in KSA website: [hori.aic.com.sa](http://hori.aic.com.sa)



Actual product may differ from image.

The manufacturer reserves the right to change the product design or specifications without notice.

HORI & HORI logo are registered trademarks of HORI.

All other trademarks are the property of their respective owners.

© Nintendo. Nintendo Switch is a trademark of Nintendo.