

D-Pad Controller (L)

EN

Instruction manual

Thank you for purchasing this product. Before using this product please read the instructions carefully. After reading the instruction manual, please keep it for reference.

Caution

- This product contains small parts. Keep away from children under 3 years old.
- Do not use this product if damaged or modified.
- Do not get this product wet. This may cause an electric shock or malfunction.
- Do not place this product near heat sources or leave under direct sunlight. Overheating may cause malfunction.
- Do not apply strong impact or weight on the product.
- Never disassemble, repair or modify this product.
- If the product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzene or thinner.
- Do not use this product for anything other than its intended purpose. We are not responsible for any accidents or damages in the event of use other than the intended purpose.

Included



Controller X 1




Instruction manual X 1

Platform

Nintendo Switch™

Layout

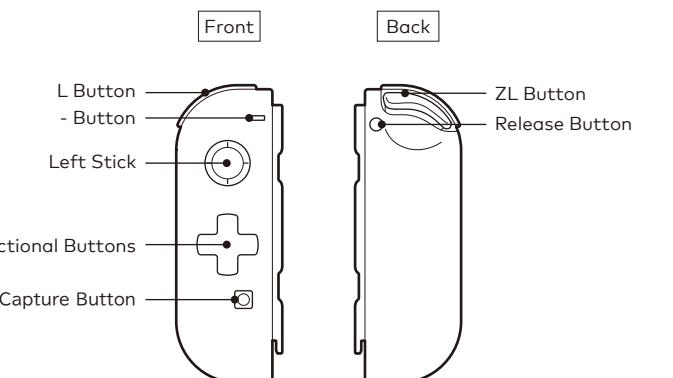

Before using this product

*Please update the Nintendo Switch™ console with the latest firmware version.

*This product only works in Handheld Mode and must be attached to the Nintendo Switch™ console to function. This product cannot be used in TV Mode or Tabletop Mode, or as a wireless controller.


*The following functions of the Joy-Con™ (L) are not included with this product: HD Rumble, Player LED, SYNC Button, SL/SR Buttons, and accelerometer/gyro sensors.

*This product cannot be used with certain accessories made specifically for Joy-Con controllers (such as the Joy-Con Grip and Joy-Con Charging Grip) due to this product's shape and size. Please do not forcibly install this product into any accessories as malfunction or damage may occur.

How to Connect


Slide this product from top to bottom along the rails on the left side of the Nintendo Switch™ console until you hear a click.

Be careful not to move the left stick when installing.

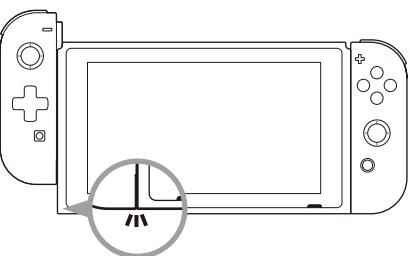

How to Remove

Hold the Release Button on the back of the product while sliding product from bottom to the top.

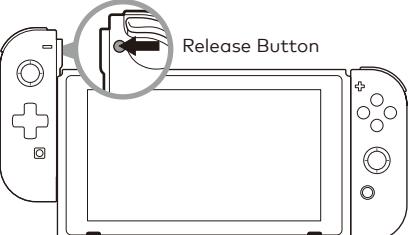

If controller is not functioning properly, remove controller from the Nintendo Switch™ console and reattach it.

If the left stick is not responding correctly, please rotate the left stick two or three times in large circles to calibrate. The process above will only work when this product is attached to the Nintendo Switch™ console and the power supply is on. This product is not compatible with the "Calibrate Control Sticks" option in the Nintendo Switch™ HOME Menu.



Joy-Con (Left) may vibrate if synced while using D-Pad Controller (L).

Specifications

Dimensions (approx): Height 3.9in (100mm) x Width 1.5in (37mm) x Depth 1.1in (28mm)
Weight (approx): 0.1lb (50g)

The normal function of the product may be disturbed by strong electro-magnetic interference. If so, simply reset the product to resume normal operation by following the instruction manual (How to connect). In case the function does not resume, please relocate to an area which does not have electro-magnetic interference to use the product. Retain the packaging and manual for future reference.

PRODUCT DISPOSAL INFORMATION

Where you see this symbol on any of our electrical products or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste. Applicable to EU countries only.



THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

US

Warranty

HORI warrants to the original purchaser that the product purchased new in its original packaging shall be free of any defects in material and workmanship for a period of 90 days from the original date of purchase. If the warranty claim cannot be processed through the original retailer please address directly to HORI at infous@hori.jp.

EU

Warranty

For all warranty claims made within the first 30 days after purchase, please check with the retailer where the original purchase was made for details. If the warranty claim cannot be processed through the original retailer or for any other inquiries pertaining to our products, please address directly to HORI at infoeu@hori.jp.

To contact AIC, the official representative of HORI in KSA, please contact us via email or phone.
Email: info@aic.com.sa
Phone number: 8001010029

For more details, you may visit HORI in KSA website: hori.aic.com.sa

Please retain contact information for future reference.
The image on the packaging may differ from the actual product.
The manufacturer reserves the right to change the product design or specifications without notice.
HORI and HORI logo are registered trademarks of HORI.

Nintendo Switch is a trademark of Nintendo. Licensed by Nintendo.